


Attaching your Fotomate camera plate to your eMotimo TB3




Tools needed:


- Fotomate
- 1/4-20 Screw
- Hex key

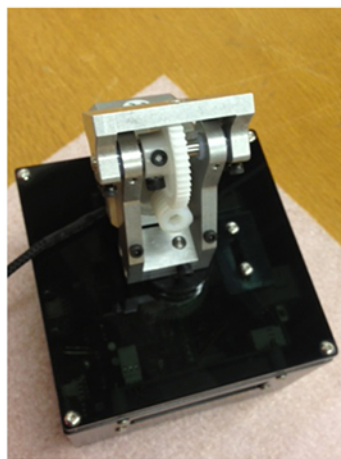

1)
With the TB3 unplugged, roll the worm gear back by hand to access the keyed slot for the mounting screw.

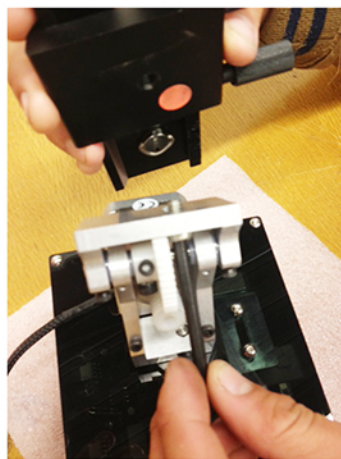

2)
Insert the screw and align the Fotomate with the TB3 tilt head.

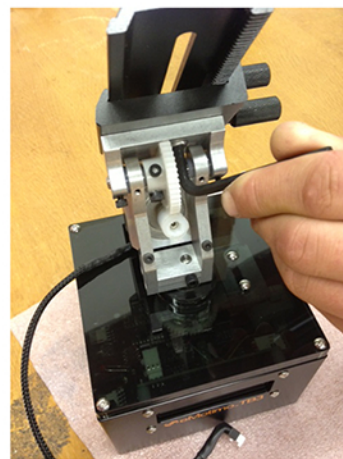

3)
Tighten screw connecting the Fotomate to the TB3. Hand tighten. This doesn't need to be over tightened as you may want to replace this camera plate in the future.